

# Plotting

Documentation



**DDBST**

Dortmund Data Bank  
Software & Separation  
Technology

DDBST - Dortmund Data Bank Software & Separation Technology GmbH

Marie-Curie-Straße 10

D-26129 Oldenburg

Tel.: +49 441 361819 0

[support@ddbst.com](mailto:support@ddbst.com)

[www.ddbst.com](http://www.ddbst.com)

## Contents

1	Quick Overview.....	3
1.1	Chart Pages .....	3
1.2	Moving Around the Chart.....	4
1.2.1	<i>Display Data Point Details</i> .....	4
1.2.2	<i>Status Bar</i> .....	4
1.2.3	<i>Show Data</i> .....	4
1.2.4	<i>Copying Data</i> .....	4
1.2.5	<i>Changing Z-Order</i> .....	4
1.2.6	<i>Zoom in for Series</i> .....	5
1.2.7	<i>Hide from Chart</i> .....	5
1.2.8	<i>Remove Data from Chart and Query Result</i> .....	5
1.2.9	<i>Zoom</i> .....	5
1.3	The Legend .....	5
1.4	Data Set List.....	6
1.5	Customizing the Chart.....	7
1.5.1	<i>Chart Title</i> .....	7
1.5.2	<i>Axis Properties</i> .....	7
1.5.3	<i>Other Toolbar Options</i> .....	7
1.6	Customizing 3D-Charts.....	10
2	Save and Copy .....	11
3	Global Plot Options .....	12
4	Printing .....	14

# 1 Quick Overview

## 1.1 Chart Pages

The plot windows are arranged in pages. If there are several possible charts for the presented data, every chart is put on a separate page in the same plot window.

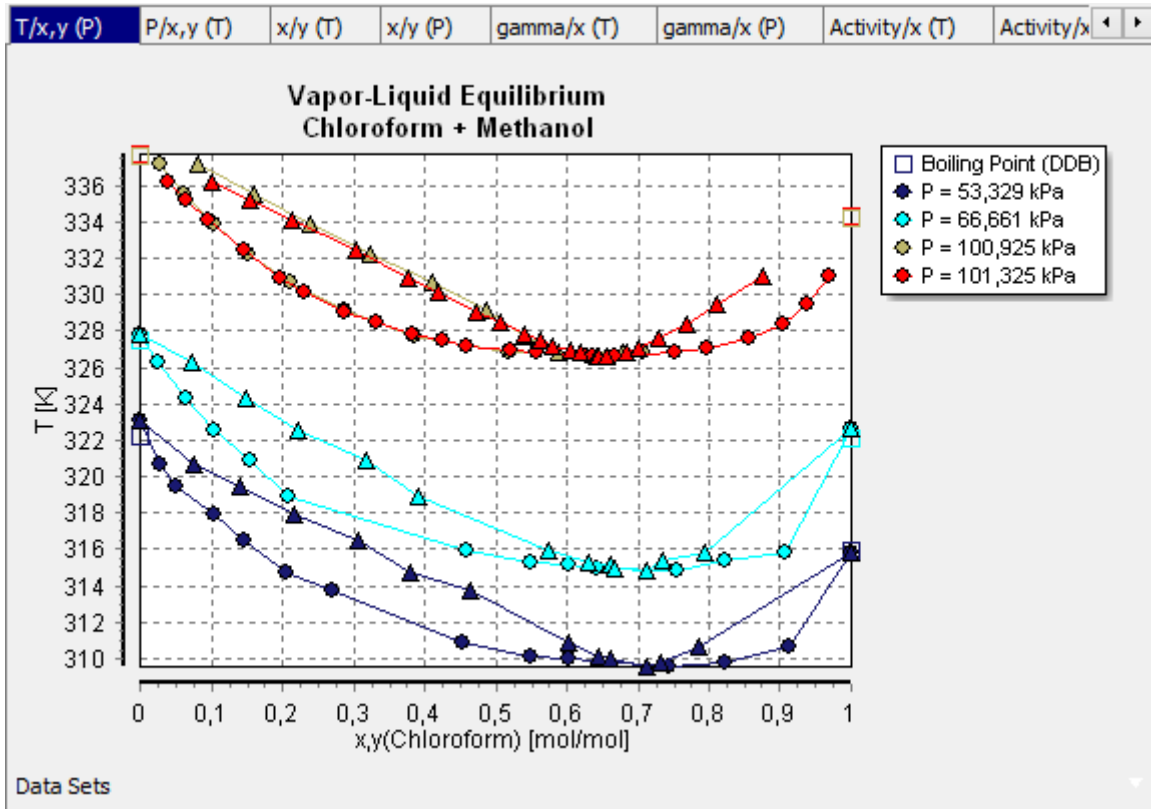





Figure 1: Main diagram window with tabs

The **page bar** has a context menu:

 Close tab 'T/x,y (P)' Ctrl+W	Close the selected page. The tab's title is displayed in the context menu ('SLE-Triangle 3D' resp. 'P/y1/y2' in the screen copies).
Close all but active	Close all other pages (only the active page will be left).
 Close all tabs Ctrl+Alt+W	Close all pages.
 Diagrams	Show a list of all diagrams.

When the last page is closed the main window is closed.

## 1.2 Moving Around the Chart


### 1.2.1 Display Data Point Details

When the mouse pointer is near a point a connection line to the point is drawn (like a **rubber band**). The maximum length of the rubber band can be customized in the global options (default: 75 points). When a point is focused some data information is displayed in the **information area** below the chart.

```
DDB-Number: VLE 5416 [Public DDB]
Ref.: [1796] Arm H., Bankay D., Helv.Chim.Acta, 51(6), 1243-1245, 1968

Components:
(1)    C12 Diethyl ether C4H10O
(2)    C110 Methanol CH4O

Constant: T = 298.15 K
```

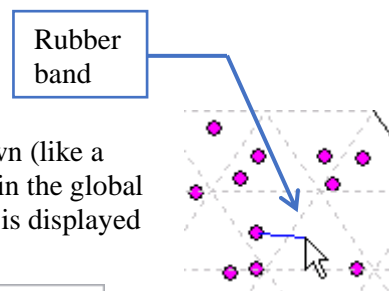

The data information can change with every point, for example if more than one system is displayed in the chart. The selected text can be copied using the context menu. When nothing is selected the whole text will be copied.

### 1.2.2 Status Bar

The **status bar** contains data point information. In the first fields the (untransformed) axis values of the current point are displayed. They are followed by all other data point information. At last, the available constant value information is displayed.

The same information as shown in the status bar is also displayed as moving hint window following the mouse cursor.

This advantage of this hint window is that it all entries are visible. Entries in the status bar might become invisible when the window becomes smaller.

```
y(C12): 0.8245 mol/mol
y(C11): 0.1755 mol/mol
P: 35.837 kPa
x(C12): 0.2 mol/mol
x(C11): 0.8 mol/mol
K1: 4.1225
K2: 0.21937
SepFac: 18.792
y1-x1: 0.6245
Act.Coeff.1: 2.06382
Act.Coeff.2: 1.00135
T: 298.15 K
```

### 1.2.3 Show Data

The **data table** to a selected point can be displayed using the series context menu.

The data table will be displayed within the Dortmund Data Bank program.

### 1.2.4 Copying Data

Use “*Copy Series Data to Clipboard*” to copy the **series data** to the clipboard. A “series” is typically representing all points of a data set and has either the same color or the same symbols.

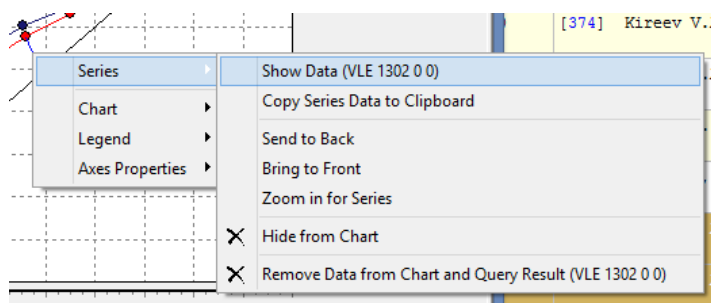


Figure 2: Chart Context Menu: Series

### 1.2.5 Changing Z-Order


To access series points which are hidden behind another series use “*Send to Back*” or “*Bring to Front*” to change the **Z-order** of the series. This changes the order in the legend, too.

### 1.2.6 Zoom in for Series

This function zooms in to show the connected series only. It is a short cut for the function in the following paragraph “Zoom” below.

### 1.2.7 Hide from Chart

This hides the connected series. If any series is hidden, an additional entry “Unhide All Series” is shown in the context menu which makes all hidden series visible again.



### 1.2.8 Remove Data from Chart and Query Result

This function removes the connected series from the diagram and also directly the marked set from the query result in the Dortmund Data Bank program.

### 1.2.9 Zoom

The mouse can be used to **zoom** into an area by holding down the left mouse button and mark the rectangle to be zoomed beginning in the *top left corner* of the area. To **scroll** the chart contents, hold down the right mouse button and move in the desired axis directions. To **undo zoom** or scroll either the “Undo Zoom/Scroll” button (🗑️) can be used or by marking an area with the left mouse button pressed beginning in the *top right corner* of the area.

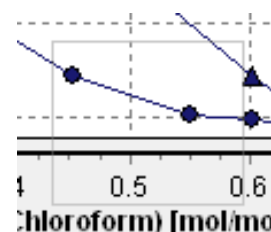


Figure 3: Zoom In

## 1.3 The Legend





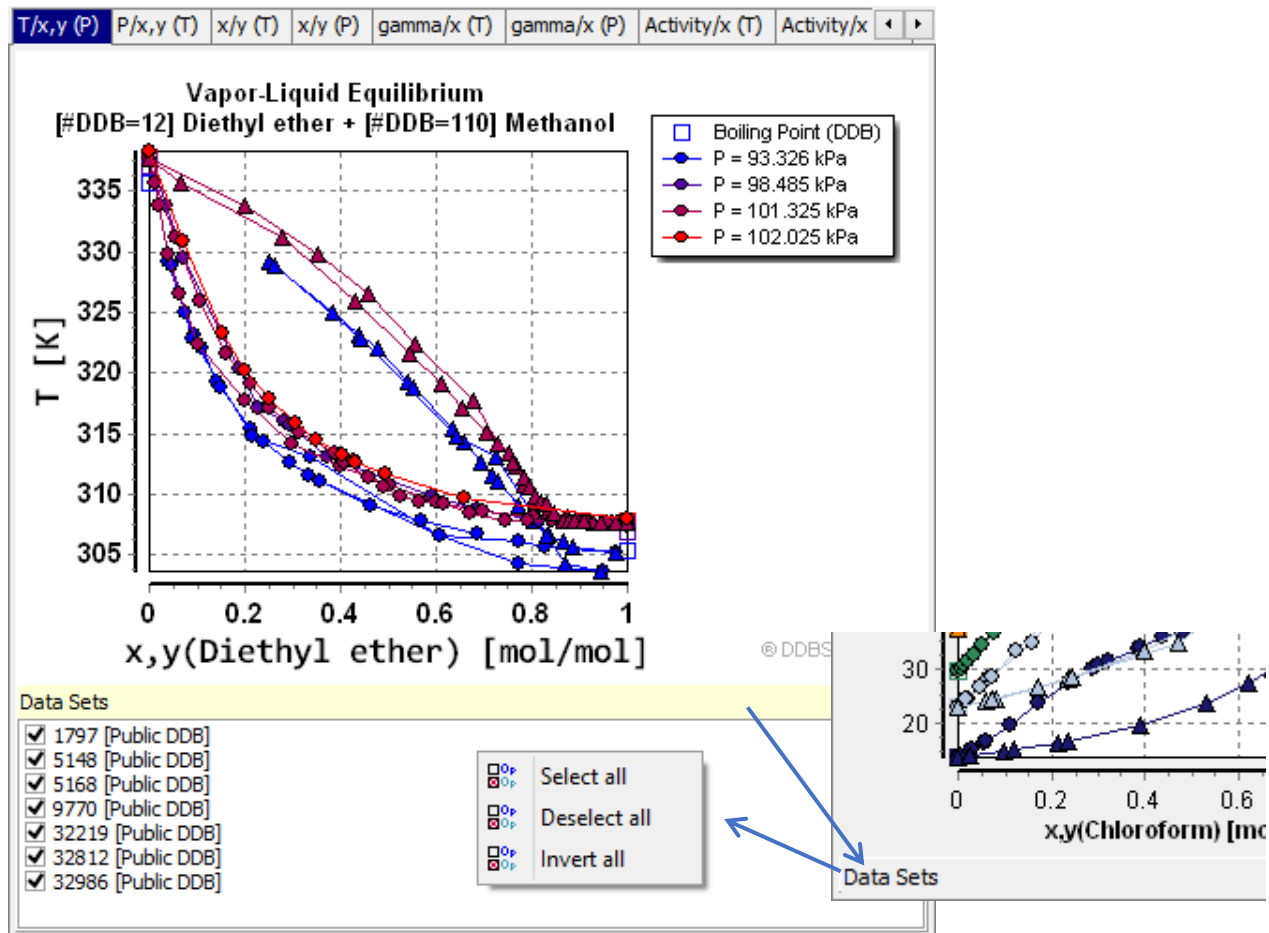
Figure 4: Chart Context Menu: Legend

The **legend** can be turned on/off using the  button or the corresponding entry in the legend part of the chart context menu. The legend position can be left from, right from, above or below the chart. If not, all legend entries can be displayed at once the legend contents can be scrolled using the mouse wheel or by holding down the left mouse button and move up- or down within the legend. The possible scrolling directions are reflected by the mouse pointer shape.

In most charts the **pointer shape** reflects the phase information. A circle is used for the liquid phase. If there's more than one liquid phase the different phases are distinguished by using left and right triangle. The vapor phase is represented by a triangle and the solid phase by a rectangle.

### 1.4 Data Set List

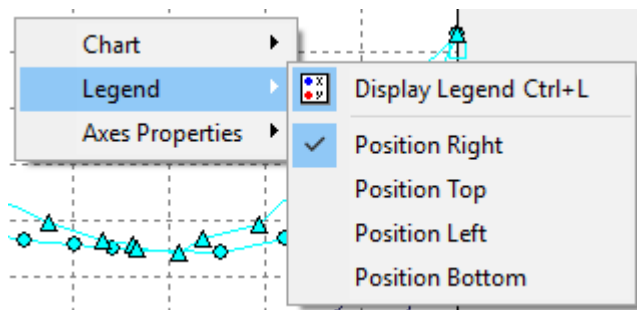The list of data sets is available through a pop-up window (“Data Sets”) below the diagram. If opened, this control shows the list of data sets. This allows single data sets to show or hide from the chart. The control has a pop-up menu that allows selecting, deselecting, and inverting all check boxes. The title line is shown in light yellow if opened and can be close by clicking on this yellow title line.



## 1.5 Customizing the Chart

### 1.5.1 Chart Title

The **chart title** can be changed by a single click on it.

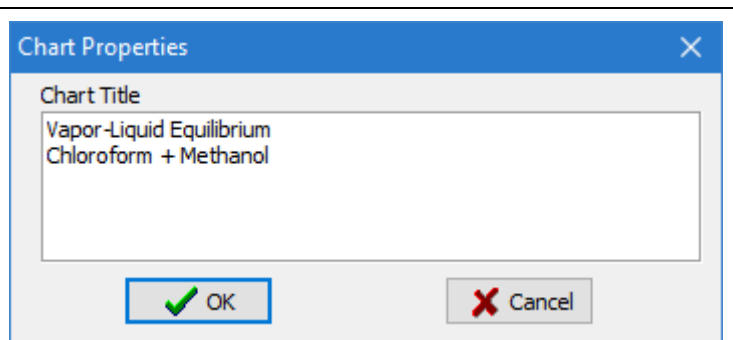


Figure 5: Edit Chart Title

### 1.5.2 Axis Properties

The **axis properties dialog** can be accessed by double-click on the desired axis or by using the axis context menu (right-click on the diagram).

Figure 6: Chart Context Menu: Axes Properties

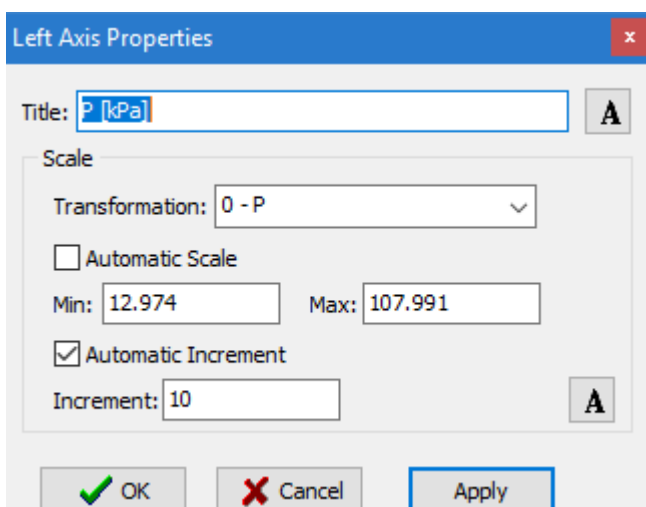
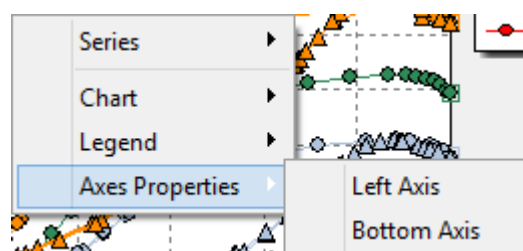





Figure 7: Axes Properties


The axis properties dialog allows changing the axis title, axis title font (upper **A**) and the font of the axis labels (lower **A**). In several cases the axis can be transformed for example to get a representation like  $\log(P)$  vs.  $1000/T$ . Furthermore, the minimum and maximum axis value can be set manually. The axis increment can be set manually or automatically.

The buttons  and  allow switching quickly between the  $\log(y)$  vs  $1000/x$  scale and *normal scale* representation.

### 1.5.3 Other Toolbar Options

 The *Make Chart Area Quadratic* button is useful for reports which often contain quadratic charts. This function adjusts the height of the diagram and leaves the width untouched.

 *Hide and*

 *show the legend.*

The first icon is shown if the legend is visible and hides the legend, the second is shown when the legend is hidden and shows the legend (see also the section *The Legend* on page 5).


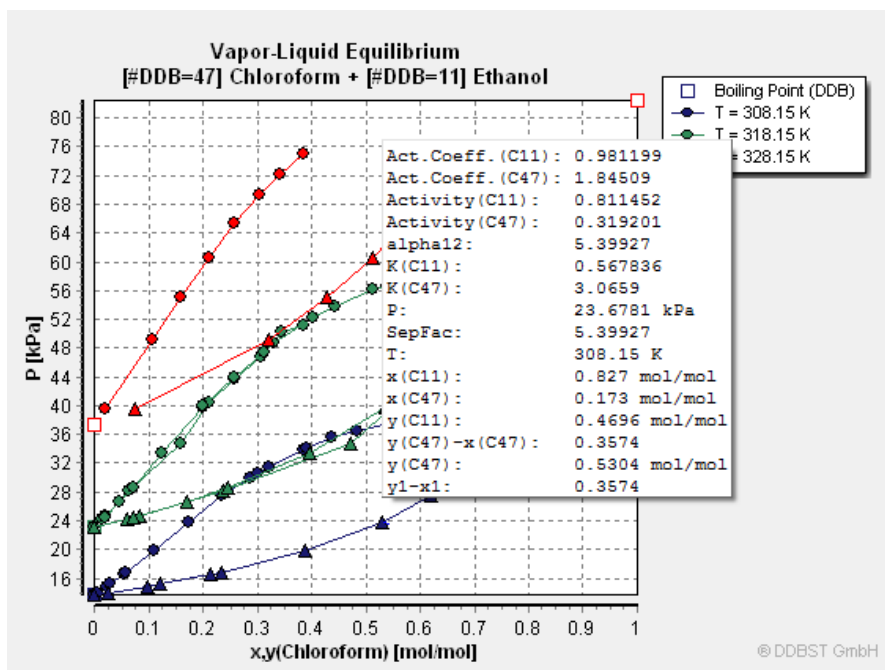


Figure 8: Point Specific Data in A Floating Window

Hide or show a floating window with point specific data.

Hide or show dotted grid in the diagrams.

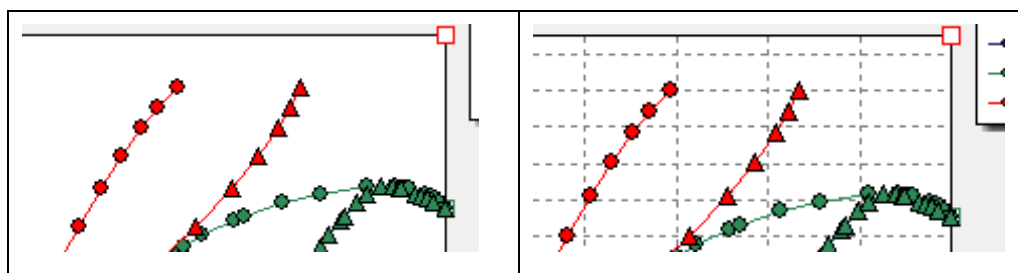

Hide or show context information box with further data point and data series information.

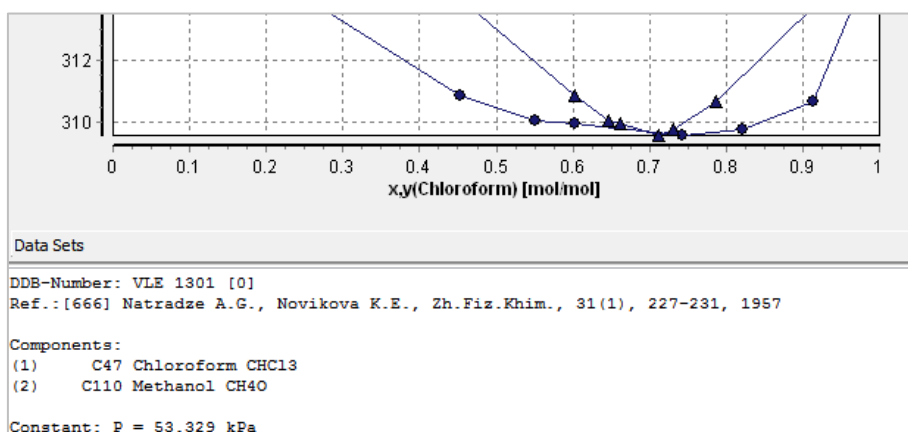


Figure 9: Context Information Box

The *Chart Editor* is a powerful integrated tool which allows you to change nearly all settings in the chart. This editor allows you to change almost every detail including hiding lines and points, changing every color, modify markers, etc.



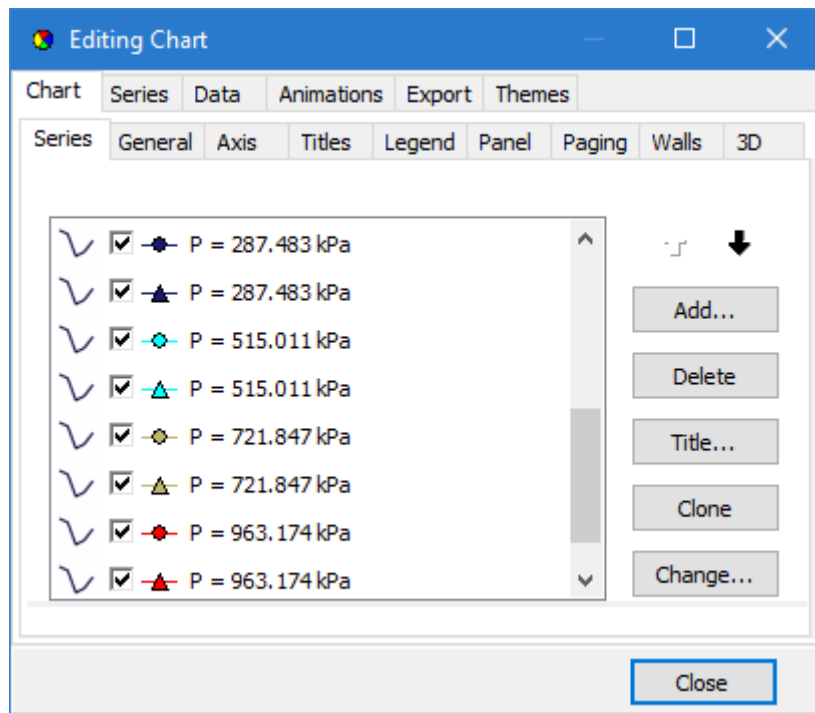


Figure 10: Chart Editor



#### Set Chart Size:

This dialog allows you to set the size of the diagram in pixels. This feature is especially useful when the size of the diagram is important like they are in publications.


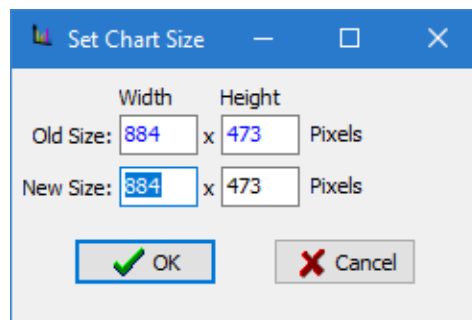


Figure 11: Setting diagram size manually



#### Show List of Systems:

If a diagram contains data from multiple mixtures (=systems) this function allows selecting the data for a single system and browse through the diagrams for all single mixtures.

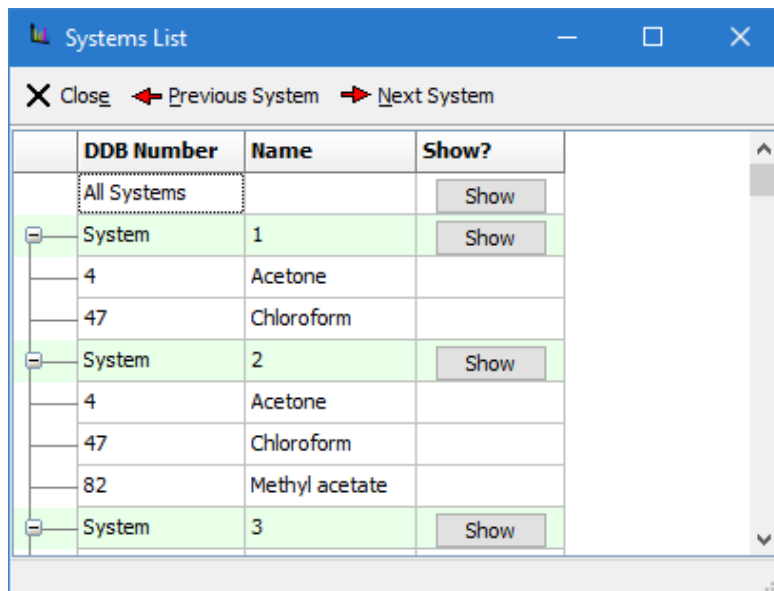








	DDB Number	Name	Show?
	All Systems		Show
[-]	System 1		Show
	4	Acetone	
	47	Chloroform	
[-]	System 2		Show
	4	Acetone	
	47	Chloroform	
	82	Methyl acetate	
[-]	System 3		Show

Figure 12: List of Systems

## 1.6 Customizing 3D-Charts


The 3-dimensional chart has some additional features represented by the tool buttons which are only visible when a 3D-chart is active.

-  When the **3D Normal Mode** is activated, the mouse can be used to zoom and scroll the chart like in the 2D mode.
-  When the **3D Rotate Mode** is activated, the mouse can be used to rotate the chart in all directions. When the chart is in “orthogonal mode” at the beginning of the rotation the orthogonal mode is automatically turned off.
-  When the **3D Move Mode** is activated, the mouse can be used to move the chart around in the plot area.
-  When the **3D Zoom Mode** is activated, the mouse can be used to change the size of the chart. When the global option “Zoom Text” is set the size of the axis labels changes with the size of the chart.
-  When the **3D Depth Mode** is activated, the mouse can be used to change size of the depth axis.
-  The **Toggle Orthogonal** button can be used to switch to the orthogonal chart and back. The size of the depth axis and the zoom scale is set for the orthogonal chart separately.
-  To switch between 2D and 3D the **Toggle 3D Mode** button can be used.

## 2 Save and Copy




This button can be used to save the chart as enhanced metafile (EMF), bitmap (BMP), D2P (a DDB internal file format), PNG, or TEE (the chart's own format). The save option is partially also available in the chart context menu.

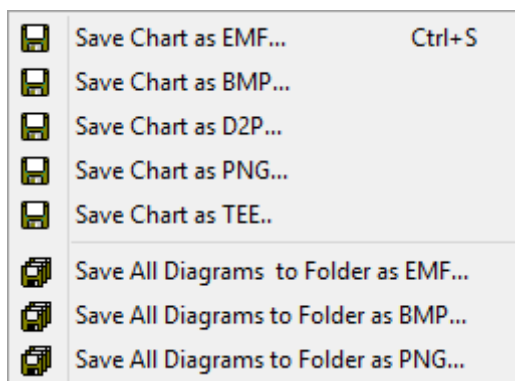

The “Save All Diagrams”-function allow storing all diagrams in the current windows to a specified folder. The plot program automatically generates file names describing the content.



This button can be used to copy the chart content to the clipboard as EMF (enhanced Metafile), as BMP (Bitmap), or as PNG (Portable Network Graphics).

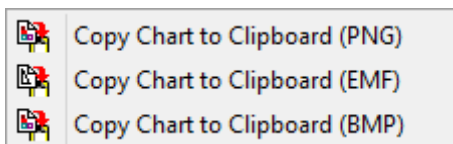

D2P files are a DDB internal format that is described in the separate document “Plot Input Files for Ternary and Binary Plots.pdf”.

### 3 Global Plot Options

The global plot options dialog can be invoked by the “Options” button in the “Edit” menu. The plot options change all diagram for all properties and data types.

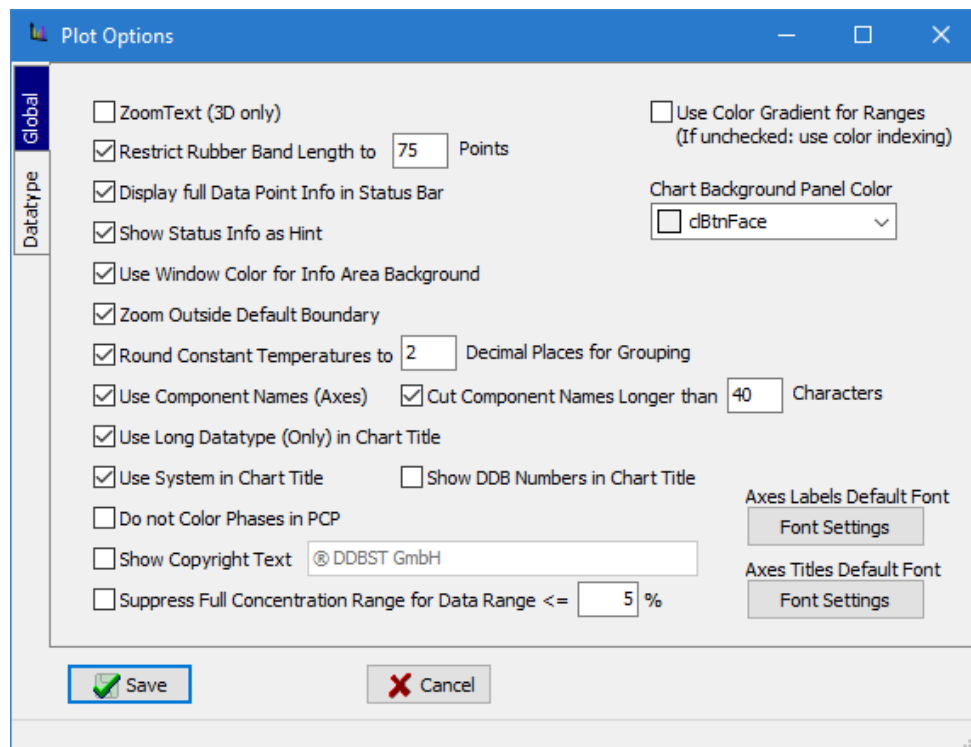



Figure 13: Global Plot Options

1. **Zoom Text (3D only)** – This concerns axis descriptions.
2. **Restrict Rubber Band Length** – This limits the length of the connection of the mouse cursor to the closest data point. If the mouse moves further away the line is hidden.
3. **Display Full Data Point Info in Status Bar** – If checked all available data are displayed and if unchecked only the data used in the diagram is shown
4. **Show Status Info as Hint** – The information shown in the status bar is also shown in a hint window. The option “Display Full Data Point Info in Status Bar” also affects this option.
5. **Use Window Color for Info Area Background** – If this option is checked the information area use the normal Windows background color for windows; if unchecked the color for button is used.
6. **Zoom Outside Default Boundary** – If this option is checked some fixed boundaries, especially the boundaries 0.0 and 1.0 for mole fractions, can be ignored for zooming and panning.
7. **Round Constant Temperatures to x Decimal Places for Grouping** – This option is meant for isothermal data sets and groups data sets at slightly different temperatures control by this setting.
8. **Use Component Names (Axes)** – This option switches between the display of full component names or the display of the DDB number only.
9. **Cut Component Names Longer than x Characters** – Place in diagram is scarce and this option switches between the display of long names and a shortened form.
10. **Use Long Datatype (Only) in Chart Title** – This option switches between the long display of a data type (e. g. Vapor-Liquid Equilibrium) and the short corresponding abbreviation (e.g., VLE)

11. **Use System in Chart Title** – Either the component names of the current system are shown or not
12. **Show DDB Numbers in Chart Title** – If this option is set the component names are preceded by their DDB number in square brackets. This option is also affected by the “Use System in Chart Title” setting.
13. **Do Not Color Phases in PCP** – Normally the plot program uses different colors for the different phase (vapor, liquid, etc.) for pure component properties (PCP). Unchecking this option will result in a single color for a single property ignoring the different phases.
14. **Show Copyright Text** – This setting allows adding a text in the right-bottom of the diagrams.
15. **Suppress Full Concentration Range for Data Range  $\leq x \%$**  – Some data types, e.g., solubility, only cover a small concentration range, may be below 1 % of one component in another. This option switches between the display of the full concentration range, e.g., 0.0 to 1.0 mol/mol for mole fraction, and the zoomed-in display.
16. **Use Color Gradient for Ranges** – This option affects the color of series over a temperature or pressure range. If this option is checked the color moves from blue for small values to red for high values. If not checked the color is arbitrarily selected from a predefined list of colors.
17. **Chart Background Panel Color** – The background color of the chart can be selected here.
18. **Axes Labels Default Font** – The font for the labels of the left, bottom, and depth axes and its size and color can be changed here.
19. **Axes Titles Default Font** – The font for the titles of the left, bottom, and depth axes and its size and color can be changed here.

## 4 Printing

To avoid undesired results printing is only available using the  button to open the **print preview dialog**. The preview allows setting the fonts for

1. chart descriptions
2. data descriptions
3. header and footer

Additionally, the chart description can be modified.


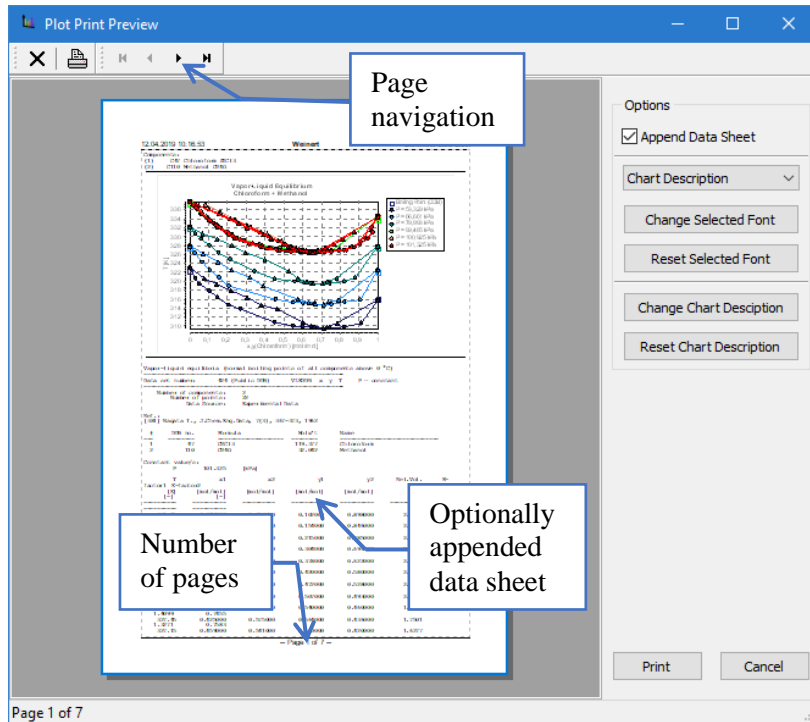



Figure 14: Print Preview

The “Append Data Sheet” option allows appending the data sets as text below the diagram and on following pages.



This button calls the standard Windows print dialog where a printer, the print area, and the number of copies can be selected.

The preview dialog supports zooming the print area by left-clicking () on the page.